


## Skinny Tile (18" x 36") Installation Guidelines

### ASHLAR

---

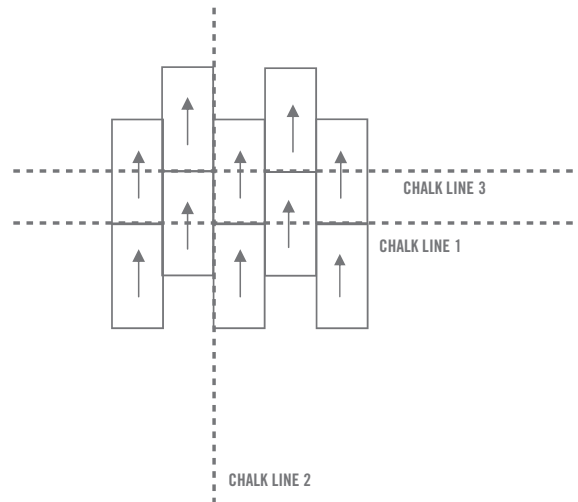

### Installation Directions


---

Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.

1. The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
2. Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
3. A second chalk line must be snapped from the starting point at 90° to the first line, and a third chalk line must be snapped at 18" apart from the first chalk line.
4. Test a dry-install of one section for pattern layout and placement.
5. Starting in one quadrant, place tiles in the ashlar pattern illustrated above.
6. Flow into the opposite quadrant, continuing the ashlar pattern.

**because flooring matters.**

## Skinny Tile (18" x 36") Installation Guidelines

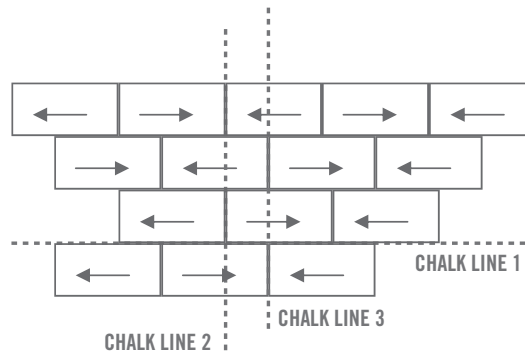**BRICK****Installation Directions**


Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.

1. The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
2. Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
3. A second chalk line must be snapped from the starting point at 90° to the first line and a third chalk line must be snapped at 18" apart from the second chalk line.
4. Test a dry-install of one section for pattern layout and placement.
5. Starting in one quadrant, stagger tiles in the brick pattern illustrated above.
6. Flow into the adjacent quadrants, keeping arrows facing each other in pairs.

**because flooring matters.**

## Skinny Tile (18" x 36") Installation Guidelines

### BOXED IN

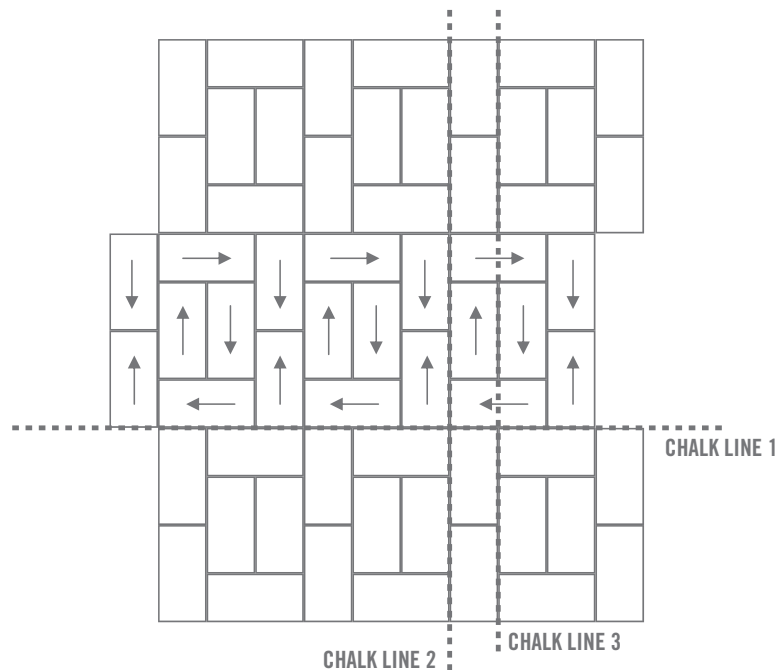

### Installation Directions

Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.


1. The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
2. Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
3. A second chalk line must be snapped from the starting point at 90° to the first line and a third chalk line must be snapped at 18" apart from the second chalk line.
4. Test a dry-install of one section for pattern layout and placement.
5. Starting in one quadrant, box-in tiles as illustrated above.
6. Continue to form boxes, constructing columns and staggering every other column 18" as in diagram.

**because flooring matters.**

## Skinny Tile (18" x 36") Installation Guidelines

### BASKET WEAVE

---

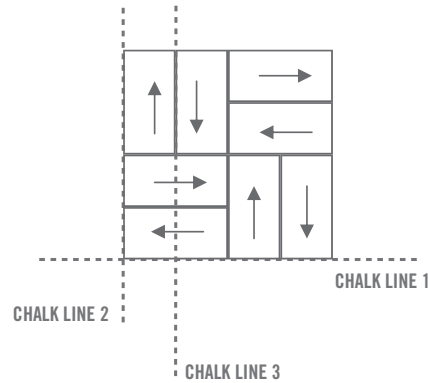

### Installation Directions

---

Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.


1. The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
2. Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
3. A second chalk line must be snapped from the starting point at 90° to the first line and a third chalk line must be snapped at 18" apart from the second chalk line.
4. Test a dry-install of one section for pattern layout and placement.
5. Starting in one quadrant, place tiles in the basketweave pattern quarter turning in pairs of two.
6. The paired tile directions should oppose each other as shown in diagram.

\*Directional arrows are featured on the back of the tile.

**because flooring matters.**

## Skinny Tile (18" x 36") Installation Guidelines

### HALF BASKET

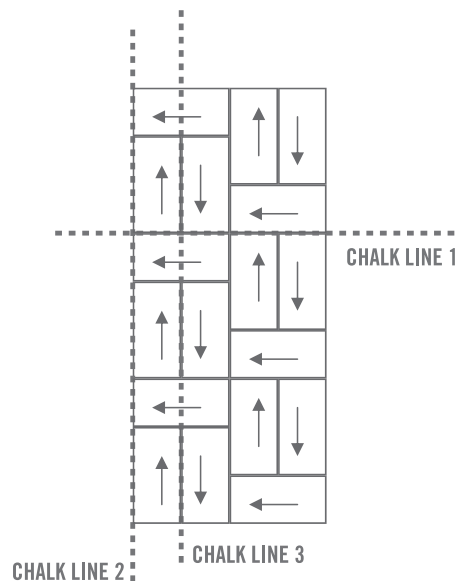

### Installation Directions


Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.

1. The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
2. Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
3. A second chalk line must be snapped from the starting point at 90° to the first line and a third chalk line must be snapped at 18" apart from the second chalk line.
4. Test a dry-install of one section for pattern layout and placement.
5. Starting in one quadrant, place tiles in the half basketweave pattern illustrated above.
6. Continue to place tiles, constructing columns for ease of installation.

\*Directional arrows are featured on the back of the tile.

**because flooring matters.**

## Skinny Tile (18" x 36") Installation Guidelines

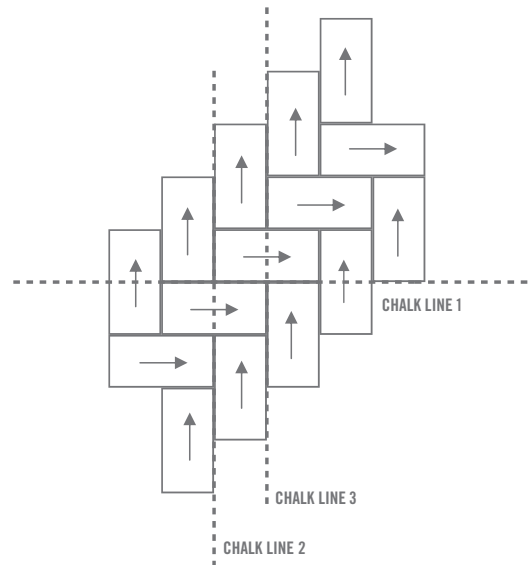**HERRINGBONE****Installation Directions**

Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.


1. The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
2. Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
3. A second chalk line must be snapped from the starting point at 90° to the first line and a third chalk line must be snapped at 18" apart from the second chalk line.
4. Test a dry-install of one section for pattern layout and placement.
5. Starting in one quadrant, place tiles in the herringbone pattern illustrated above.
6. Flow into the opposite quadrant, continuing the herringbone pattern.

**because flooring matters.**

## Skinny Tile (18" x 36") Installation Guidelines

### MONOLITHIC

---

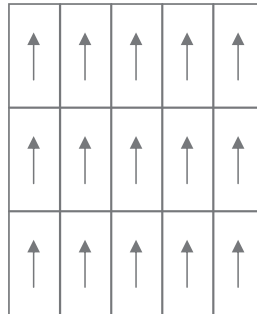

### Installation Directions

---

Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.

1. The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
2. Test a dry-install of one section for pattern layout and placement.
3. Place tiles in the monolithic pattern illustrated above.

**because flooring matters.**